


3D Corner Seat Installation Guide


Jan 2020-01



For most up-to-date instructions, visit www.ubertile.com

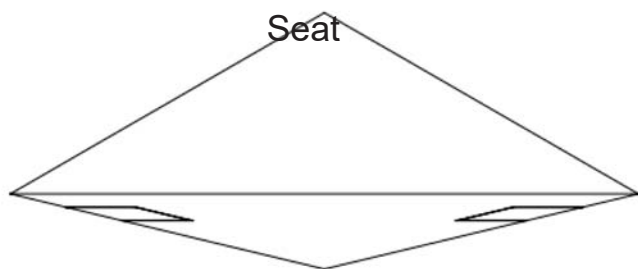

View of Seat **Assembled**

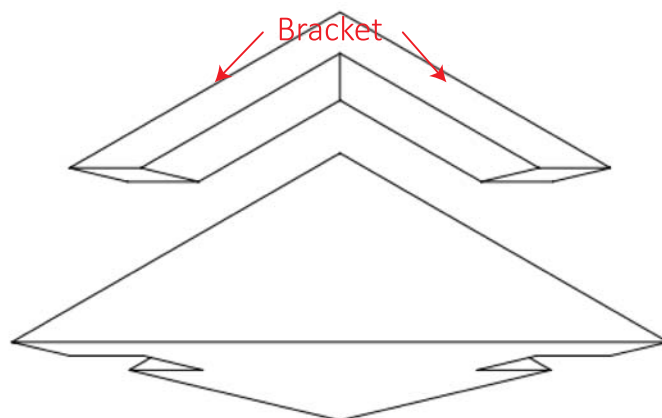

View of Seat **Un-Assembled**

Uberseal



Required Materials

(not Included)



ANSI A118.4

Included Materials

Fiber Mesh



Washers



x6

Screws



x6

Recommended Tools (not Included)

Level



Caulking



Flat



Tape Mea-



Power Drill




Marking
Device



Requirements:


- The Ubertile Corner Seat is intended to be installed **OVER TOP** of 1/2" Uberboard Waterproof wall panels.
- Wood backing is required behind the 1/2" Uberboard Panels to properly fasten the seat.

Instructions:

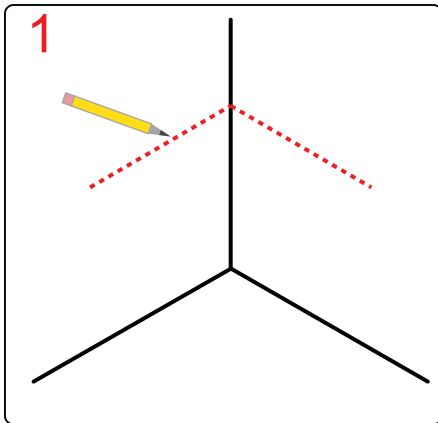


-Mark on top of the installed and waterproofed 1/2" Uberboard Wall Panel where your seat will be installed.

-Ensure you have wood backing behind 1/2" Uberboard Wall Panels.

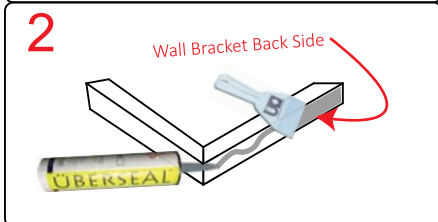


-Apply liberal amount of Uberseal joint sealant to the back side of the corner bracket that will be affixed to the wall. Use a flat spreader to smooth the Uberseal

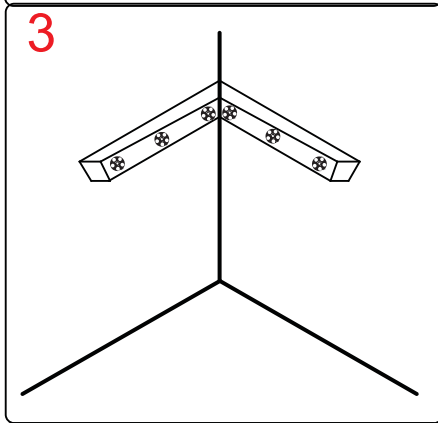


-With the Uberseal still wet, press the corner bracket onto the wall in the proper position.

-Use 3 screws and 3 washers per bracket side to fasten the bracket.

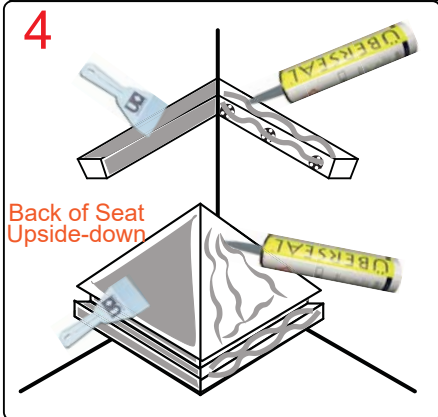


-Apply Uberseal to the top and side of the corner bracket. Ensure the screw and washer are fully covered. Apply Uberseal on seat bracket cutout where it will contact the bracket and the backs of the seat where it will contact the wall. Smooth with a flat spreader.

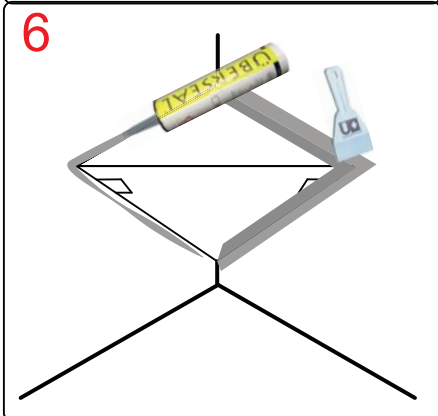


-Apply bead of Uberseal to the entire perimeter of the seat and smooth with a trowel (with approximately 1" of Uberseal overlapping onto the other surfaces)

-For maximum strength, once the Uberseal is cured, apply Tile Thinset Mortar to the perimeter of the seat to wall connections and embed the fiber mesh tape into the mortar.

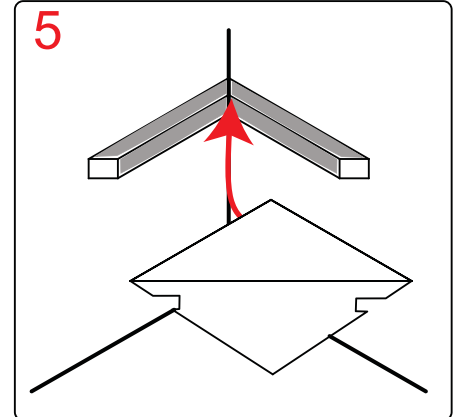

-With the Uberseal still wet, slide the bench onto the wall brackets.

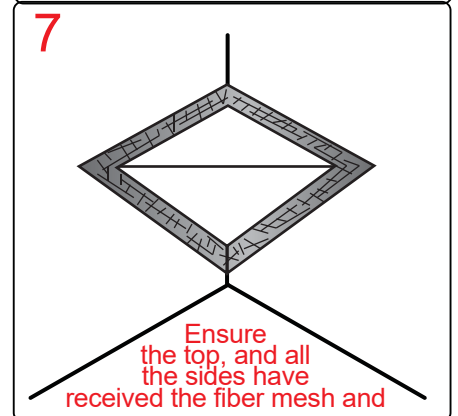

-Please ensure to slope seat top tile 2% or 1/4" per foot slope for water drainage.