


Shower Seat Installation Manual

ÜBERTILE®
Technology for Tiling



scan for most current
installation manuals

Included Materials:




Rectangle-to-Floor
Seat
(12" or 16" model)

&



Baffle
(not included
with Triangle Seat)

OR

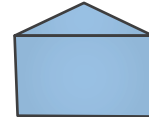

Triangle-to-Floor
Seat
(16" or 21" Model)

Required Materials Standard Shower:



Uberseal
Use with Uberboard
Classic & Tech Panels




ANSI A118.4 or
A118.15 Thinset

Required Materials Steam Shower:



Waterproof Fabric
banding, inside and
outside corners

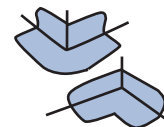

ANSI A118.15 Thinset

Required Tools:




Level



Caulking
Gun



Spreader

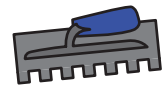

3/8"x3/8"
sq-Notched Trowel



Marking
Device



Handsaw or
Circular Saw



Tape Measure



1/4"x3/16"
V-Notched Trowel
(Steam showers only)

The information pertained within this guide is for reference only and does not supersede instructions from other product manufacturers or building codes.

Always consult and follow manufacturer's specific installation and safety instructions BEFORE installing any products.

Übertile™ bears no responsibility or liability for damage(s) resulting from the contents contained within this manual.

Information may change without notice. Visit www.ubertile.com for most current revision.


All tasks performed by the product user are at the own risk and liability of the user.

2025-01




How to **modify seat size**. Skip this step if **not** modifying the standard seat size. Does not apply to triangle seat.


If you want to make the seat smaller, it can be cut and joined together on-site.

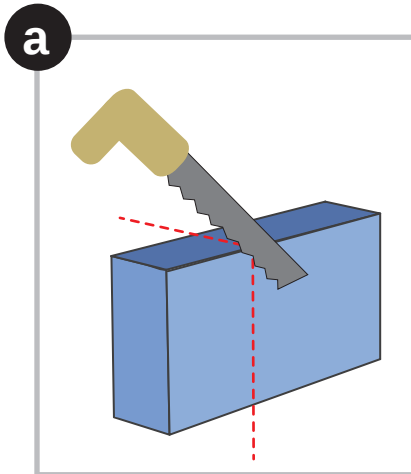


Cut the bench to the desired size.

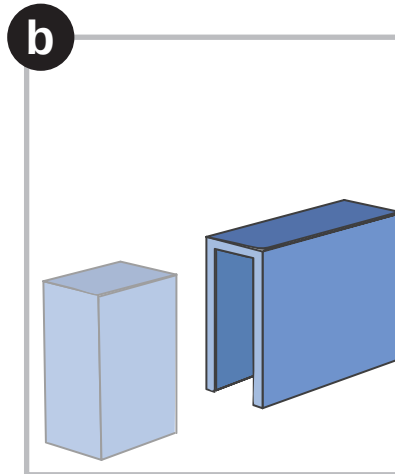


Remove the cut material.

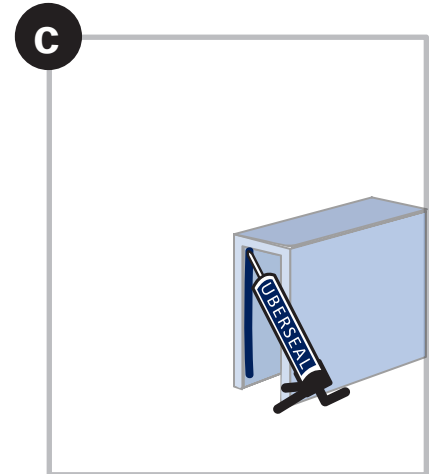


Apply a bead of Uberseal Joint Sealant **INSIDE** of the bench where the baffle will be inserted.

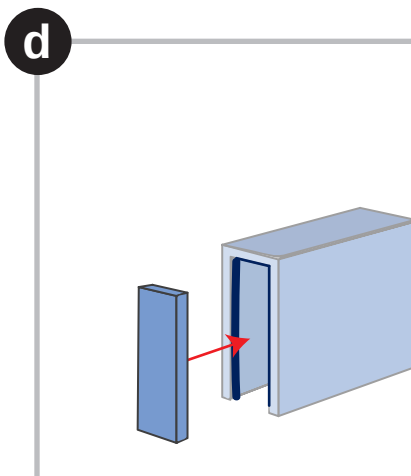


Insert baffle at end of seat.

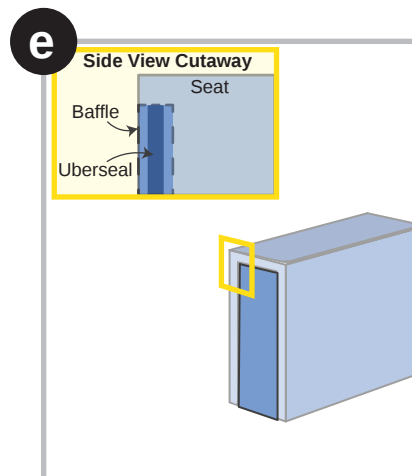


Installed baffle should be flush with end of the seat as shown.

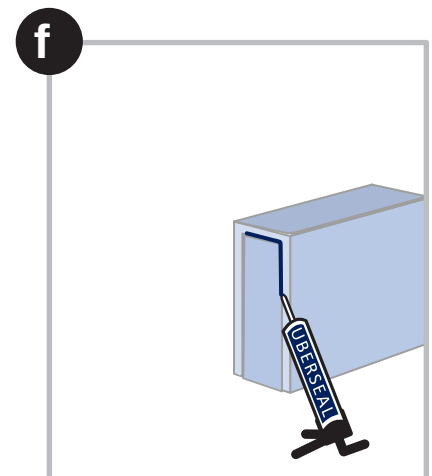

Apply bead of Uberseal joint sealant to edge of baffle and seat connection.

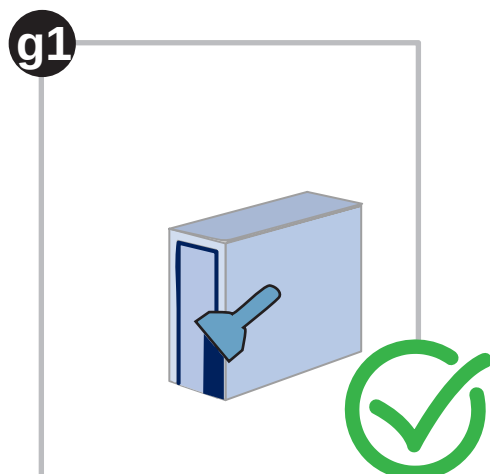


Spread Uberseal at the joint with minimum 1" overlap per side.

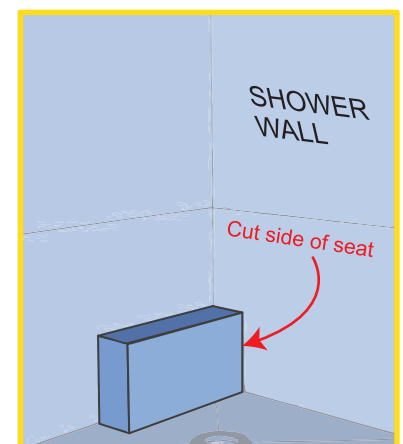

Note. If there is an adjoining wall for the side of the seat, the cut side of the should be placed against it.


Installation of seat in the shower.

a

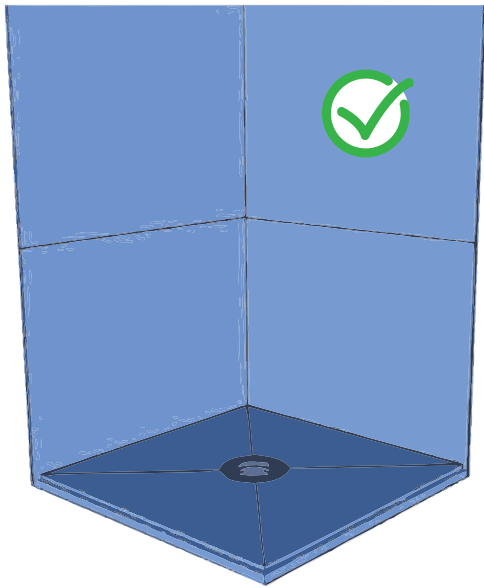


The Pre-sloped Shower Pan and Uberboard wall panels should be installed, with all seams waterproofed **PRIOR** to installing the seat.

b

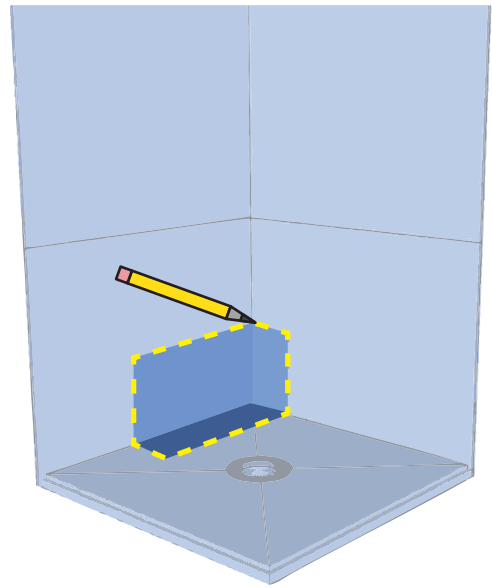


Mark the seat location inside the shower.

c

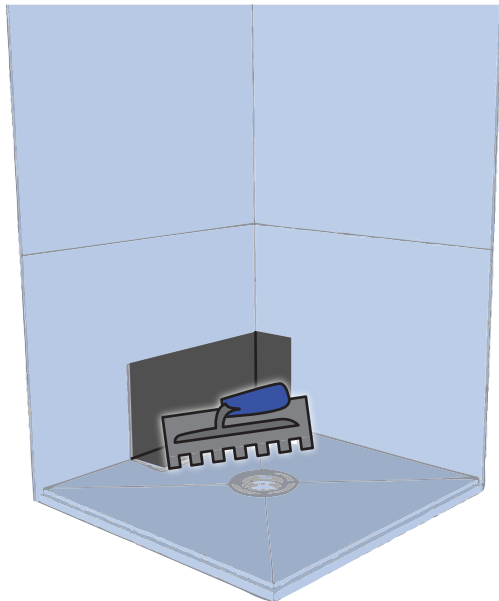


Spread Thinset onto the floor and wall to receive the seat.

d

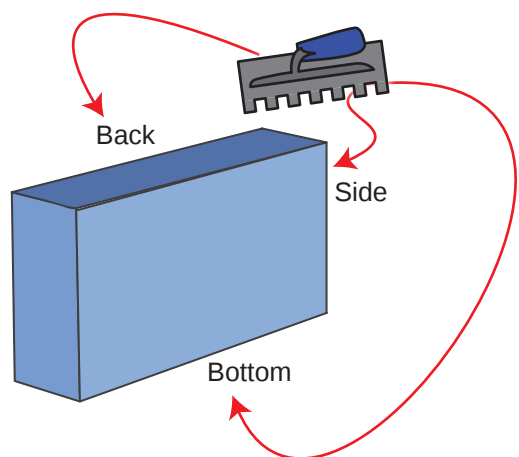

Using the flat side of the trowel, key thinset into the back, side & bottom of the seat.


e

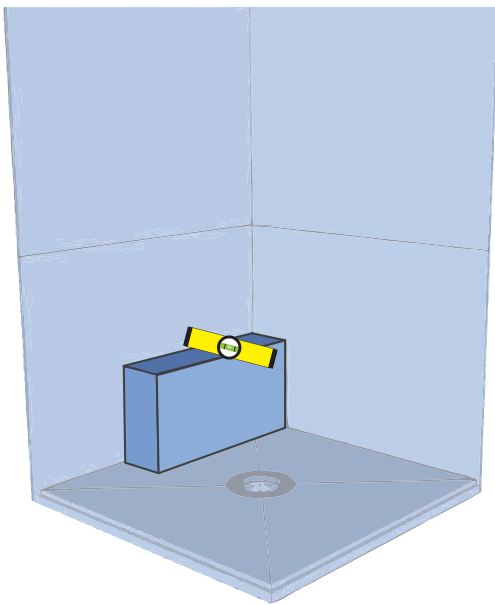

Install the bench into the wet thinset, pressing firmly into place, to ensure full thinset transfer. Allow for slope.

f1

Standard Shower:

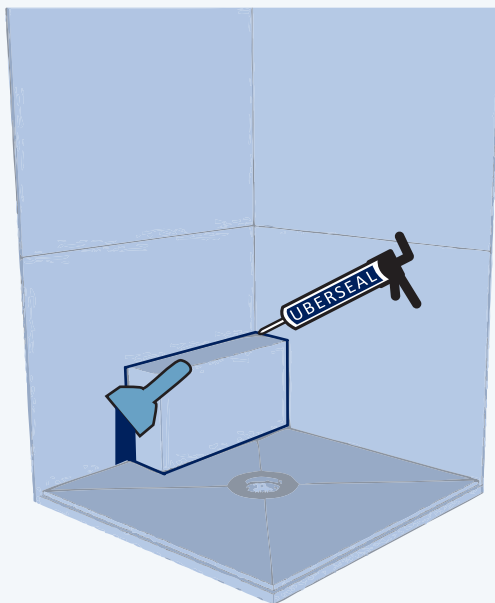


Apply Uberseal liberally to all Bench seams, tooling flat to create a minimum 1" overlap onto all surfaces.



f2

Steam Shower:

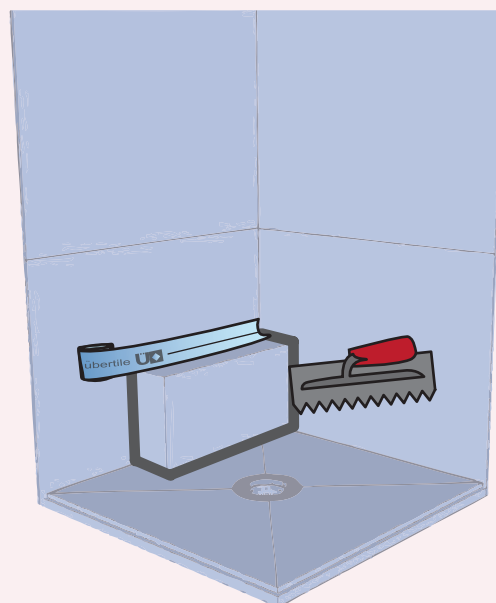

Apply thinset with a 1/4"x3/16" v-notch and embedding the waterproof fabric & corners into the wet thinset with 3" overlap.

