



ACCESSORIES

ÜBERTILE®

Technology for Tiling

Ubertile® Waterproof Pre-sloped Curb Installation Manual

Compatible with:

POINT Series / Série



THIN Series / Série



LINEAR Series / Série



Technical Questions?

1-877-759-5755 (M-F 9am-5pm, MST)
tech@ubertile.com



scan for most current
installation manual




WWW.UBERTILE.COM

The information within this guide is for reference only and does not supersede requirements from other product manufacturers or building codes. Consult and follow manufacturers specific installation and safety instructions. Rudiger Group Inc bears no responsibility or liability for damage(s) resulting from the product installation. All tasks performed by the product user are at the own risk and liability of the user. Information may change without notice. Visit www.ubertile.com for most current revision of document. Contact 877-759-5755 during business hours for MSDS.

rev 07-22-2025

1.1C - Required Products, Tools, Materials

Materials

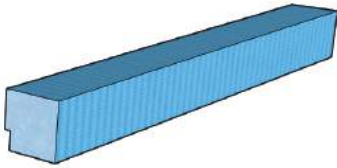

Ubertile Presloped
Shower Curb



Überseal™




Non-Steam Showers
Modified Thinset Mortar
rated ANSI A118.4 or A118.15



Intermittent Use Steam Showers
Modified Thinset Mortar
rated ISO 13007 C2TES2
ANSI A118.4 or A118.15


Tools

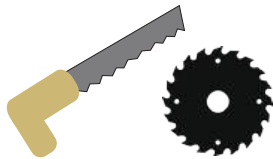

Hand Saw or Chop Saw



Marker / Pencil

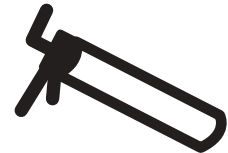


Caulking Gun



spreading tool



Tape Measure


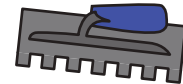


3/8"x3/8" sq
notched trowel

Safety Gear (see product MSDS sheets for further info)




1.2C - Slope

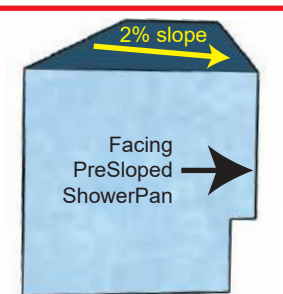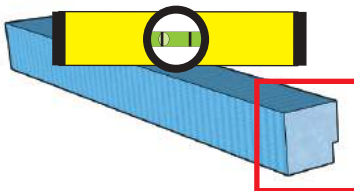


- The top of the curb is sloped to direct water into shower.
- The curb must be installed so the slope is directed INTO the shower.

1.3 C - Cutting



Measuring and planning for the Curb

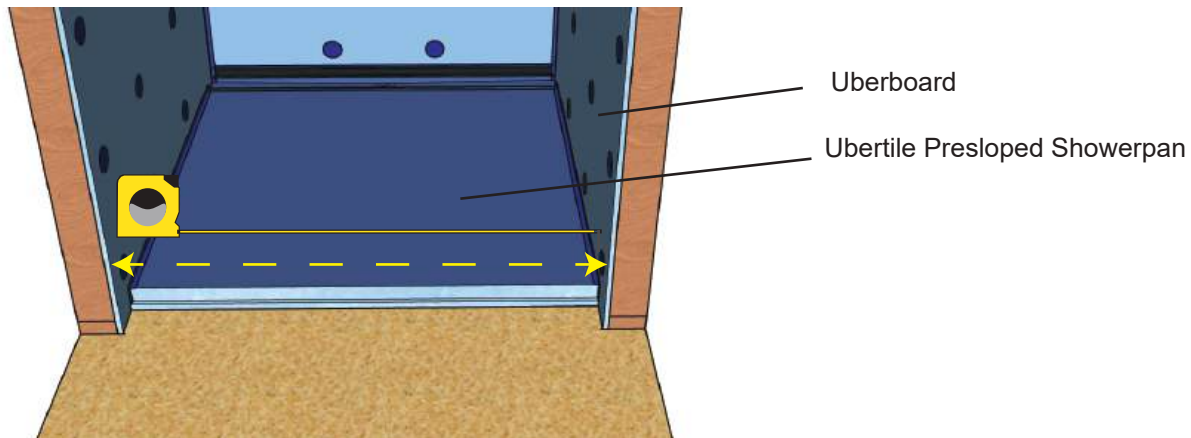

- The **Curb** is installed last, AFTER both the **Uberboard** and **ShowerPan** have been installed.
- Where the **Curb** meets another **Curb**, mitred the **Curb(s)** where they meet.
*Example: On **ShowerPan** with a 90° outside corner, the **Curb(s)** must be mitred at 45°.*

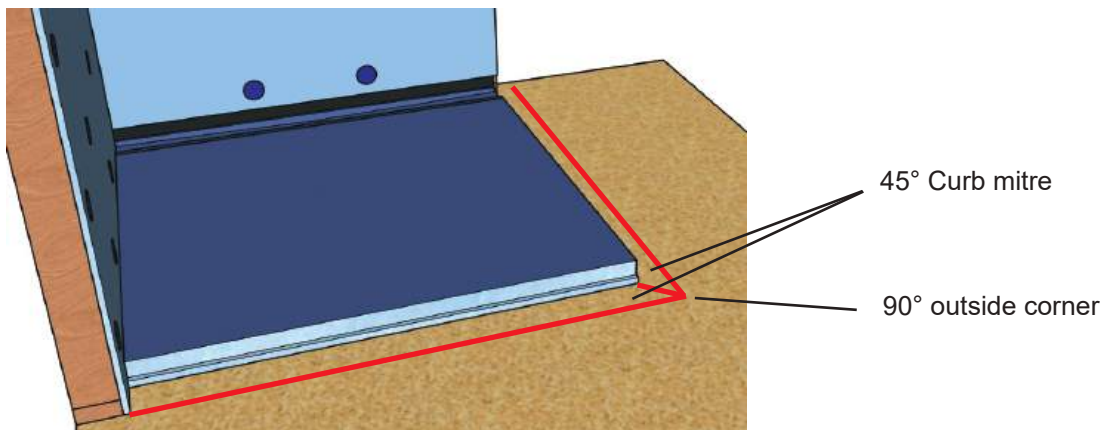


- The **Curb notch** must match the **perimeter notch of the ShowerPan**.
*Example: On a **LINEAR ShowerPan** when installing the curb the same direction as the slope, the **Curb notch** must be cut at an angle to match the **ShowerPan perimeter notch slope**.*

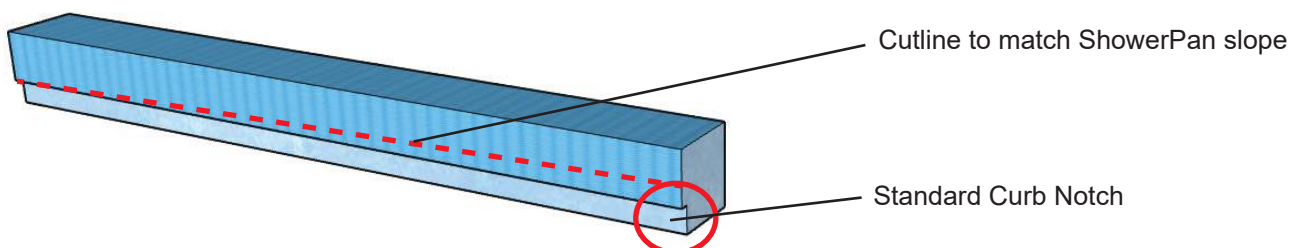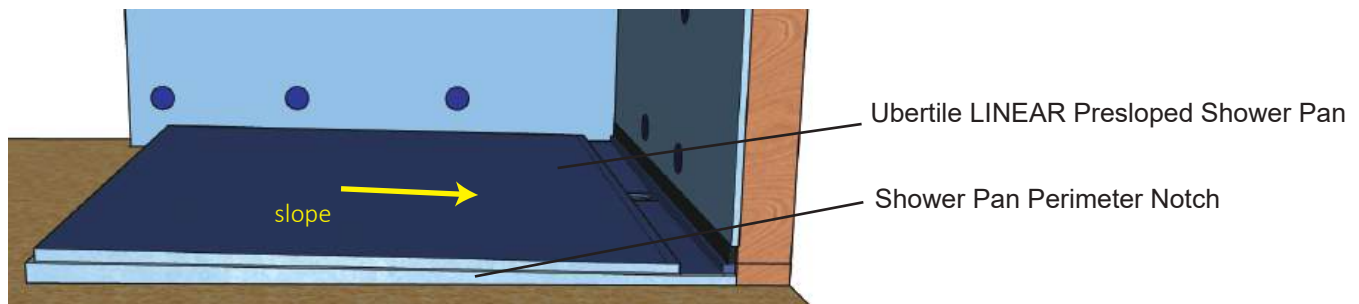

1.3 C - Cutting


Cutting Basic

a.

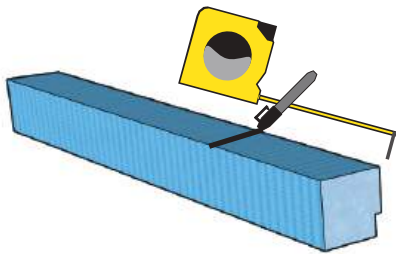


Measure and mark the **Curb**.

b.

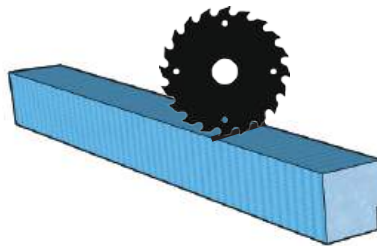


Using a **Circular Saw** or **Handsaw**, cut the **Curb**.

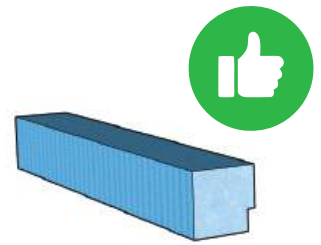


2.1 C - Installation


a.

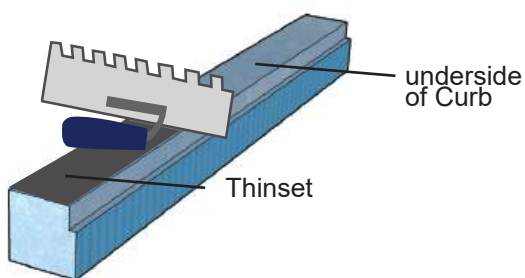


Using the flatside of a **Trowel**, spread **Thinset** onto the underside of the **Curb**.

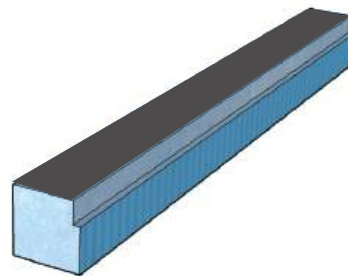


b.

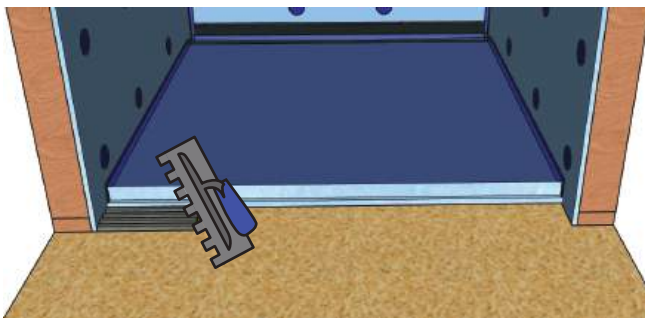

Using a **3/8" x 3/8" trowel**, spread **Thinset** onto subfloor where **Curb** will be installed.

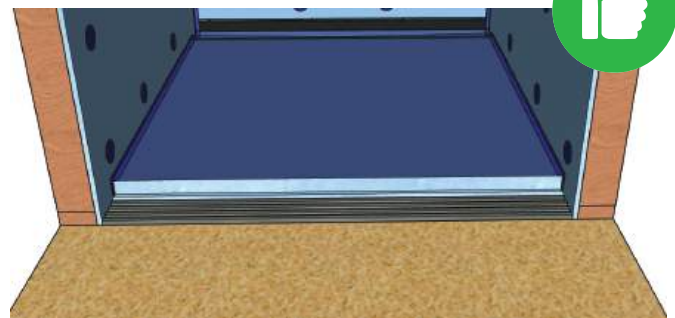

c.

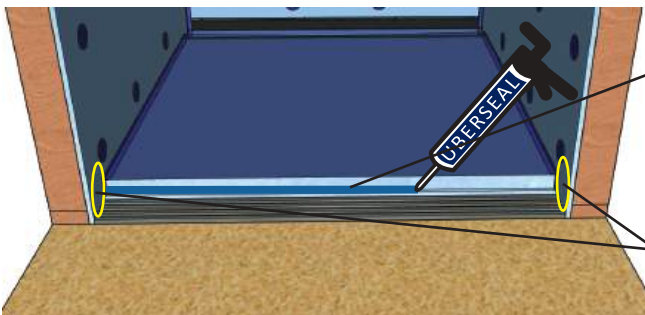


For BOTH Steam Showers and Non-Steam Showers:
Apply **Uberseal** at the Perimeter notch of the **ShowerPan**

For Non-Steam Showers only
Apply **Uberseal** the **Uberboard** where it will contact the **Curb**.

2.1 C - Installation

d.

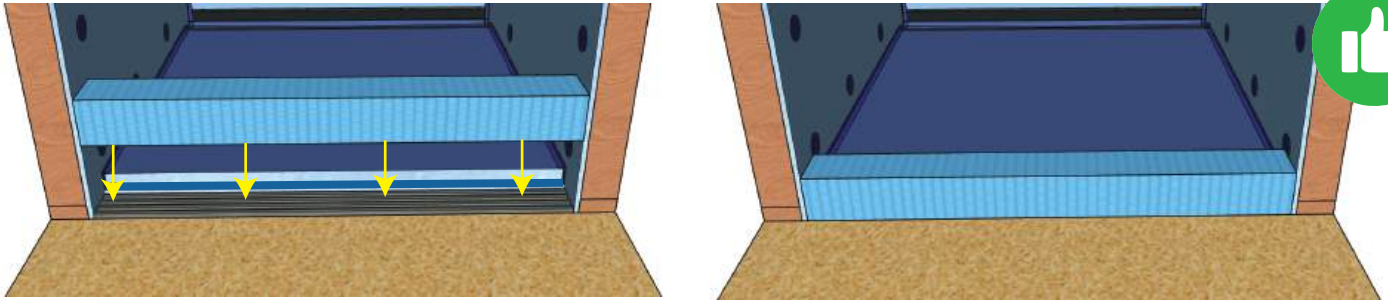


With the **Uberseal** and **Thinset** still fresh, install the **Curb**, pressing down firmly. If necessary, place a heavy object (ie bag of **Thinset**) ontop of the **Curb** while curing.

While fresh, the Uberseal which “oozes” out must be spread smooth. The Uberseal must contact

e. **For Non-Steam Shower use:**

With **Uberseal** still fresh, spread **Uberseal**, covering 1” onto all adjoining surfaces. If a 1” spread is not achieved, apply additional **Uberseal** and spread again, until a 1” spread is achieved.




Tiling can begin as soon as the **Uberseal** does not stick to your tile trowel.

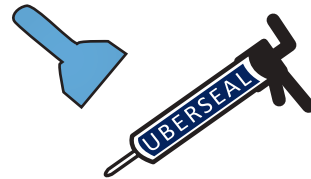

For Steam Shower use:

Use the **Ubertile Inside & Outside Fabric Corners** and **6” wide Fabric** to seal the **Curb** to the **Uberboard Vapor** panels.

The **Fabric** is installed by applying **Thinset** using a **1/4”x3/16” v-notch trowel**, embedding the **Fabric** into the wet **Thinset**, then tooling with a flat trowel to bond together.

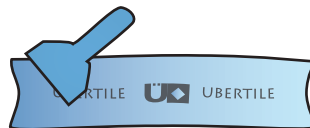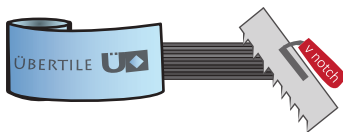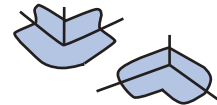



Do NOT use Uberseal™ with Uberboard™ **Vapor** panels.





Use Thinset and Vapor Fabric.